



Operator's Manual



Double Din Multi-Media System



www.rse.co.nz

Contents

Installation.....	4
Frame Button Description.....	4
Main Menu.....	5
Radio.....	5
Playing Disc.....	6
Bluetooth Operation.....	7
Phone Calling Instructions.....	7
Phone Calls.....	7
Phone Dialling.....	8
Phone Book.....	8
Phone Music.....	8
System Setting.....	9
Mirror Link.....	9
Sound Settings.....	10
Display Settings.....	10
Media Settings.....	11
Bluetooth Settings.....	11
Time Settings.....	12
Light Settings.....	12
Car Steering Settings.....	13
Touch Calibration.....	13
Factory Settings.....	13
Remote Control.....	14
Wiring Diagram.....	15

Installation

This unit is designed for 10-16.8V negative ground operation system only. Before installing this unit make sure your vehicle is connected to 10-16.8V negative grounded electrical system.



The negative battery terminal must be disconnected before making connections, this will reduce the risk of damage from a short circuit.

Ensure you connect the colour coded leads as per the diagram. If you connect these incorrectly it may cause the unit to malfunction or damage the vehicles electrical system.

Ensure you connect the negative speaker leads to the negative speaker terminal and never connect the left and right channel speaker cable to each other or the vehicle body. Do not block any vents or radiator panels as this could cause heat to build up and may result in a fire.

After you have completed the installation of this unit including reconnecting the battery, press the reset button once on the front panel with a pointed object (ballpoint pen) to set the unit to initial status.

Frame Button Description

- PWR: Long press power on/off
- MUTE: Turn off sound
- VOL+: Volume up
- VOL-: Volume down
-  Menu button
- BAND: Short press is Radio transition, press for selection of FM1, FM2, FM3, AM1, AM2. Long press for 3 seconds to come into the screen touch calibration interface
- MIC: Microphone
- AUX: AUX In
- USB: USB port
- SD: SD port
- IR: Remote control sensor
- RES: Reset button, factory default
-  Eject disc

Main Menu



Slide the screen to the left and right below the top line to access the next menu page. Touch the desired icon to enter.

Radio



- To return to the main menu press the backwards arrow in the top corner
- Short touch on the left and right arrows will move you to the next frequency
- Long touch on the left and right arrows will enter manual search
- To switch to FM1, FM2, FM3, AM1 and AM2 press the FM1 Button on the left


To set Pre-set Station:







Once you have searched for the preferred station press the icon position down the bottom, hold until preferred station appears. Continue to set all stations to desired icons.

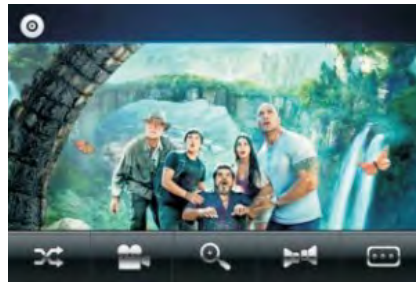Playing Disc

From the Home Menu select the disc icon.

Slide the screen to the left of right from the bottom toolbar to access the next toolbar.



-  Back to main menu
-  Menu catalogue
-  Play/Pause
-  Stop playing
-  Random play
-  Repeat play
-  Angle control option
-  Zoom in and out
-  Slow down switch
-  Channel switching
-  Subtitles on/off
-  Keyboard switch
-  Short press last song, long press rewind
-  Short press next song, long press fast forward

Bluetooth Operation


NOTE: Due to different brands of devices using different Bluetooth modules and software, some features may be different and some devices may not be compatible with this unit.


To connect your device for the first time please ensure Bluetooth is enabled on your device. Select the Handsfree icon on the main menu and then search for your device name in the list and select to pair with it.

If a code is required it will be 0000 or 1234.



Once paired successfully the Bluetooth Icon will be shown in blue at the top of the screen and the icon on the left hand side will change to green.

Once connected you can make and receive phone calls and play music.

When the Bluetooth Icon is green  this means it is connected

To disconnect and reconnect touch this icon 

Phone Calling Instructions

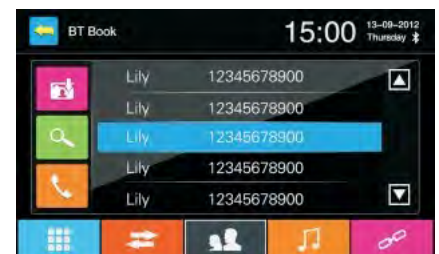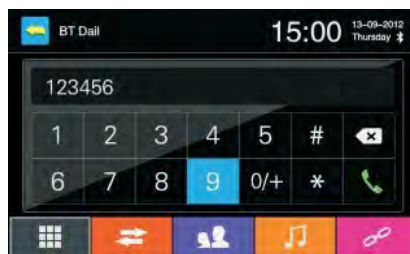

Phone Calls



This icon will take you to the Phone page



This icon will update the incoming call records from your phone



This icon will update the outgoing call records from your phone



This icon will update the dismissed call records from your phone



Touch this icon to make a phone call

Phone Dialling



This icon will take you to the Dial page



Backspace



Once you have entered the phone number, press this icon to dial out

When you have an incoming call, press this icon to answer the call



Press this icon to hang up or reject a call



This icon will transfer the sound between the phone and radio

Phone Book



This icon will take you to the Phone Book page



Press this icon to upload your phone book



Last page



Next page




Once you have entered the phone number, press this icon to dial out

When you have an incoming call, press this icon to answer the call

Phone Music

On the Home menu, touch "Streaming" to enter the Bluetooth Phone Music.

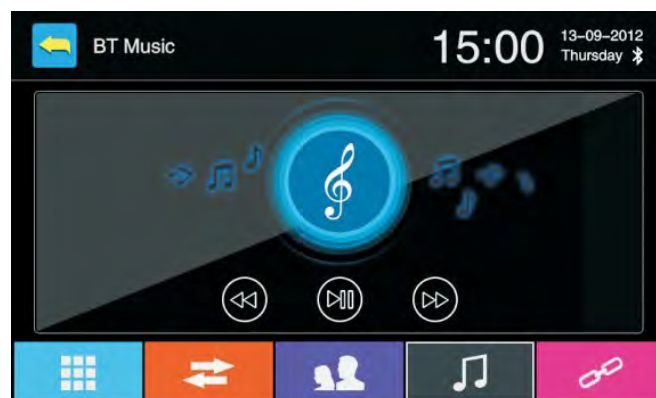

System Setting



Under the main menu select the Settings icon to enter the settings menu.
From here you may alter:

- Area
- Language
- Front Camera
- Rear Camera
- Headlamp Detection
- Brake Detection
- Subwoofer
- Key Beep


Mirror Link




Mirror Link is designed for Android systems. Use a connection cable to connect the phone to the unit for music, movies and photos. You can operate the phone via the screen display, and operate the screen display via the phone.

Note: When using Mirror Link to play music and videos from your mobile phone, please connect the phone via Bluetooth first so you can hear the sound.


Sound Settings

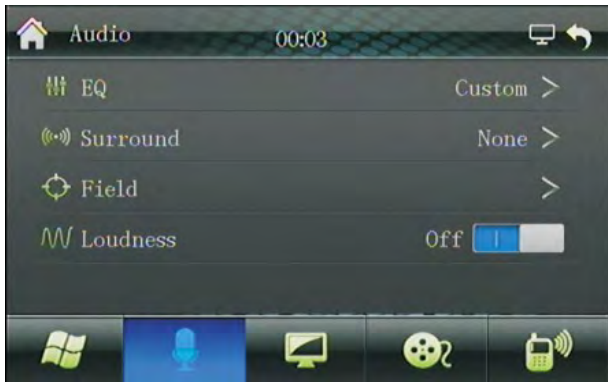

 Under the setting menu touch the sound setting icon to enter the sound menu. From here you may alter:

- EQ
- Surround
- Field
- Loudness

Display Settings

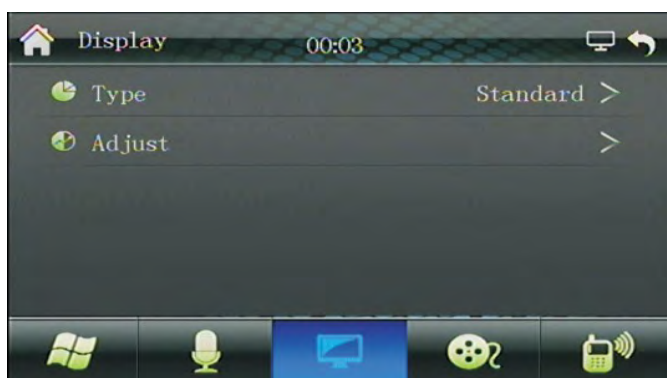


Under the setting menu touch display setting icon to enter the display menu. From here you may alter:

- Type
- Adjust

 

Media Settings



 Under the setting menu touch this icon to enter the media menu. From here you may alter:

- Audio Language
- Subtitle
- Menu Language
- Change Password
- Rating


Bluetooth Settings

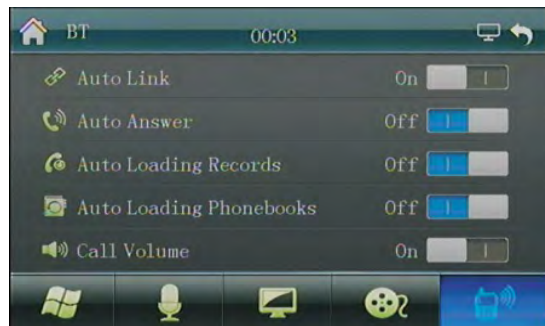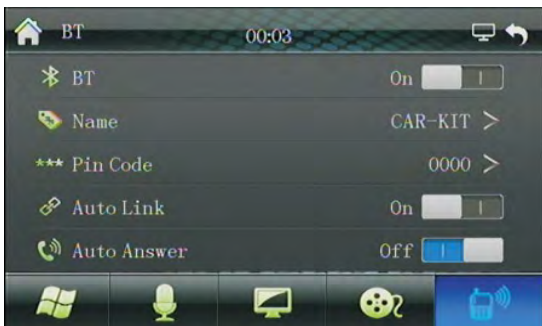

Under the setting menu touch Bluetooth setting icon to enter the Bluetooth menu From here you may alter:

- Bluetooth
- Name
- Pin Code
- Auto Link
- Auto Answer
- Auto Loading Records
- Auto Loading Phonebooks
- Call Volume

Time Settings

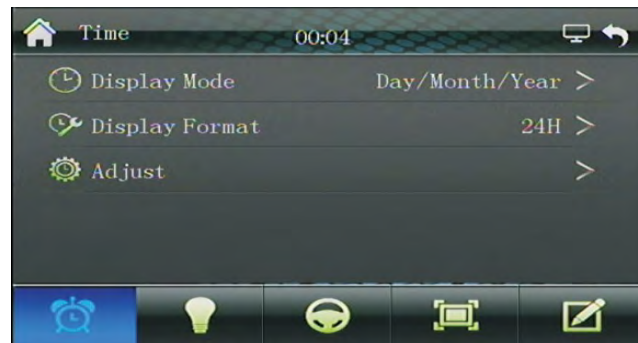


Under the setting menu touch the time setting icon to enter the time setting menu.

From here you may alter:

- Display Mode
- Display Format
- Adjust

Light Settings

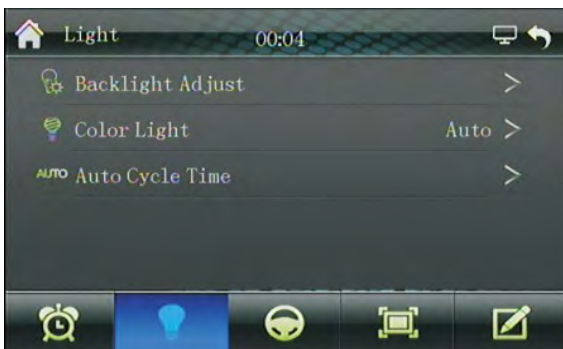


Under the setting menu touch the light setting icon to enter the light setting menu.

From here you may alter:

- Backlight adjust
- Colour Light
- Auto Cycle Time

Car Steering Settings

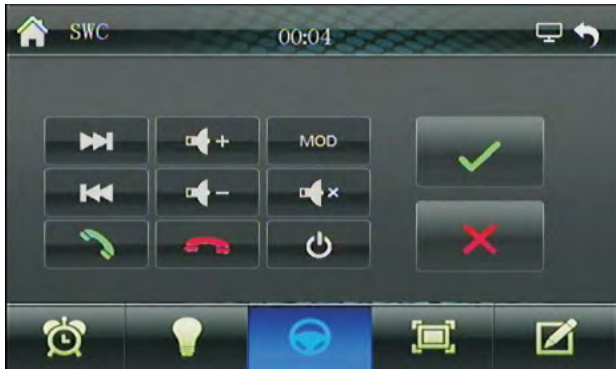


Under the setting menu touch the car steering icon to enter the car steering settings menu.

From here you may alter:


- Steering Wheel
- Study

Touch Calibration

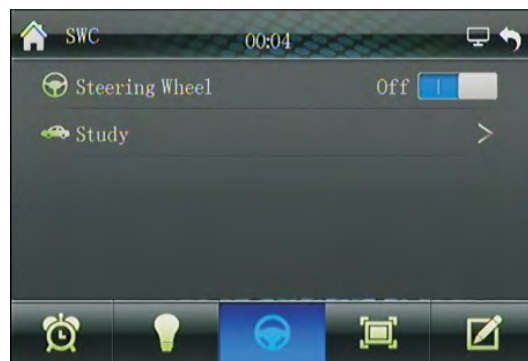

Under the setting menu touch the icon to enter the calibration setting menu.

Factory Setting

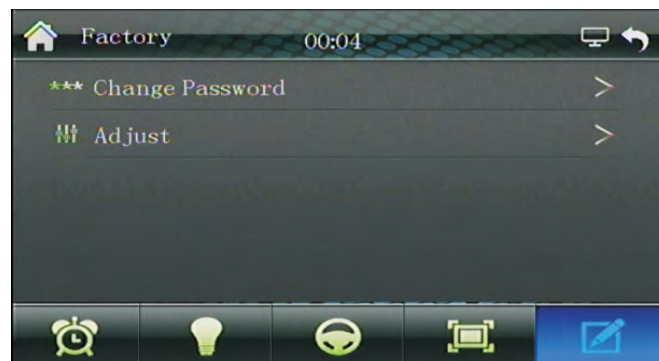

Under the setting menu touch the factory icon to enter factory setting menu.

From here you may alter:

 
- Change Password
- Adjust

Remote Control

1. Power
2. Mode
3. BND/SYS
4. Left arrow
5. Enter
6. Stop
7. AMS/RPT
8. ST/PROG
9. LOC/RDM
10. PBC Menu
11. OSD
12. Number Keys
13. GOTO
14. Volume
15. Audio
16. Select
17. Fast Forward
18. Zoom
19. Angle
20. Slow
21. Setup
22. Title



Wiring Diagram

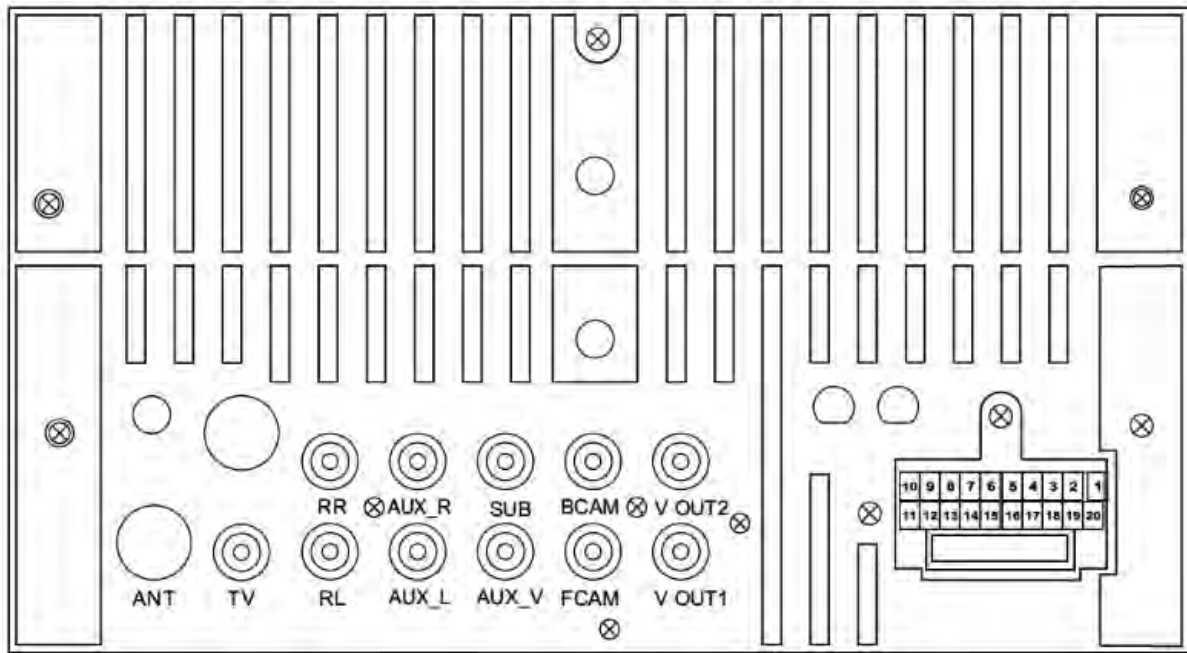

- | | |
|--------------------------------------|---------------------------------------|
| 1. Black—Steering Wheel Control-GND | 11. Purple/Black—Right Rear Speaker - |
| 2. Yellow—ILL+ illumination for lamp | 12. Grey/Black—Right Front Speaker - |
| 3. Pink —SWC 2 | 13. White/Black—Left Front Speaker - |
| 4. Yellow—SWC 1 | 14. Green/Black—Left Rear Speaker - |
| 5. Blue—Radio Antenna | 15. Yellow—+12V DC |
| 6. Red—ACC on (+12V) | 16. Black—GND |
| 7. Green—Left Rear Speaker + | 17. Brown—Front Camera Power |
| 8. White—Left Front Speaker + | 18. IR wire for TV Box |
| 9. Grey—Right Front Speaker + | 19. Pink—Rear View for Camera |
| 10. Purple—Right Rear Speaker + | 20. Brown—Brake control line |

IMPORTANT: Please ensure that number 20 is connected to earth for CD operation.