



Channels as of March 2019

1	1	5	Prime	9	HGTV	13	MAORI	17	2
2	2	6	(D)	10	E90 8	14	O TE REO	18	+HR=₽
3	+H _R = _E	7	©hoice™	11	SHINE	15	Parliament TV	19	bravo plus1
4	bravo	8	+HR®E	12	HopeChannel	16	130	20	Prime Plus 1



1	RADIO NEW ZEALAND NATIONAL	2	RADIO NEW ZEALAND CONCERT	3	BASIEFM	4		5	George®
---	----------------------------	---	---------------------------------	---	---------	---	--	---	---------

Instructions for Mini Lite Installation

- 1. Mount Mini Lite so antenna cable, USB Ports and HDMI Cable are accessible.
- Connect satellite antenna to Mini Lite receiver.
- Connect HDMI cable from Mini Lite to TV.
- 4. If using the supplied Y cable for power, remove existing power cable from TV and plug into the female end of the T cable, then plug male ends into TV and Mini Lite.
- 5. Plug IR sensor into IR socket on the side. Mount IR sensor to front side of TV or wherever you can point the remote to.
- 6. Turn TV on with the TV remote and select HDMI input.
- 7. Turn the Mini Lite on with the Mini Lite remote and select channel to view.

CAUTION - PLEASE NOTE: Should you be disconnecting and/or reconnecting the satellite dish lead please ensure the Receiver is turned OFF. This will prevent any short circuit on the LNB supply voltage from the Receiver. Also ensure there is no faults on the aerial lead and any dish connections are correct. RSE will not cover any warranty where LNB output has been damaged.

CONDITIONS OF SALE:

RSE accepts no warranty on the availability of channels from any satellite network.

From time to time channel lists and programs change, this may require you to have this receiver reprogrammed or set up with new software. This may require a technicians visit, website access or sending this unit back to RSE in Auckland for programming. Some of the above will incur charges which would be the responsibility of the customer to pay.

RSE does not accept any warranty on the services provided other than hardware failure.

TO RECORD USING THE PVR (Personal Video Recorder)

For all recording modes a USB stick or hard drive needs to be inserted in the right side of the Mini Lite. A High speed stick is recommended and up to a 1TB hard drive can be used.

For Instant Recording:

Press Record button on the remote and the channel currently being viewed will be recorded. A message will appear with 'Initializing Recorder' then an information bar will appear at the top of the screen. Press 'Exit" to close the information bar and a red R will stay in the top corner to confirm you are recording. To stop recording press the 'Stop' button and then press OK at the pop up.

For Timed Recording:

- 1. Press the INFO button the remote to ensure the time is correct. If the time is not correct, see below on how to set the clock
- 2. Press the EPG button on remote
- 3. Use the arrow keys to navigate through the EPG menu and highlight the programme you wish to record
- 4. Press the GREEN button once for reminder, then again for record. A green R will appear next to the programme
- 5. You can now exit our of the menu and back to the main screen as your programme is et up to record. Please ensure there is power going to the unit and the dish is locked onto the satellite to record successfully.

To alter this recording press 'Menu' then right arrow to find 'System Set Up' down arrow to 'Timer Setting' and press 'Ok', your recording should be in the list, press the Yellow button to edit.

Note: You cannot view other channels while you are recording.

TIMED RECORDING

- 1. To delete Timed Recordings, Select MENU then scroll across to 'System Set Up' and press OK
- 2. Scroll down to 'Timer Setting' and press OK
- 3. Select the recording you would like to delete and press the green button, a pop up will appear and select YES.

TO PLAYBACK RECORDED PROGRAMME

- 1. Press the Menu button and navigate to 'Multimedia'
- 2. Scroll down and select 'Media Player'
- Press OK on the folder named USDKA1.
- 4. Press OK on the folder named PVR
- 5. Your recordings will be listed, highly your selection and press OK
- 6. Scroll down to the MPG file and press OK to view
- 7. When you have finished viewing the recording, press the STOP button, the press EXIT until you return to the TV screen.

SATELLITE FINDER

Press INFO three times on the remote control to bring up the Satellite Finder function. On your screen you will see the Signal Intensity and Signal Quality bars. This is to help you align your manual satellite dish.

TO SET THE CORRECT TIME

Press MENU then right arrow to 'System Setup' and press OK

Scroll down to 'Time Setting' and press OK

Scroll down to 'Time Zone' and press OK

Arrow up to select +12:00 and OK to confirm

Scroll down to 'Daylight Saving' and set to ON or OFF as determined by the time of year

Press EXIT until you return to the main screen.