Schumacher

SPI2



English	02
Deutsch	.14
Español	26
Français	.37
Italiano	48

Nederlands	. 59
Polski	70
Português	. 82
Svenska	. 94



Model: SPI2 Automatic Battery Charger OWNER'S MANUAL

Markings and symbols













Read manual Warning before using.



Contact the equipment supplier for details on how to properly dispose of this product within a specific country, per WEEE requirements.

Caution, Do risk of electric ex shock. to

Use in a

well-ventilated

area.

Do not expose to rain.

For indoor Class II use only. Charger



Keep away from sparks and flame – battery could emit explosive gases.

Plug types



 




WARNING READ THE ENTIRE MANUAL BEFORE USING THIS PRODUCT. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY OR DEATH.

IMPORTANT: READ AND SAVE THIS SAFETY AND INSTRUCTION MANUAL.

SAVE THESE INSTRUCTIONS – This manual will show you how to use your charger safely and effectively. Please read, understand and follow these instructions and precautions carefully, as this manual contains important safety and operating instructions. The safety messages used throughout this manual contain a signal word, a message and an icon. The signal word indicates the level of the hazard in a situation.



IMPORTANT SAFETY INSTRUCTIONS – SAVE THESE INSTRUCTIONS. 1. This manual contains important safety and operating instructions.



AWARNING AWARNING RISK OF ELECTRIC SHOCK OR FIRE.

1.1 Read the entire manual before using this product. Failure to do so could result in serious injury or death.

1.2 Children should be supervised to ensure that they do not play with the appliance. This appliance can be used by children aged

from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- **1.3** This charger is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the charger by a person responsible for their safety. Children should be supervised to ensure they do not play with the charger.
- **1.4** Do not expose the charger to rain or snow.
- **1.5** Use only recommended attachments. Use of an attachment not recommended or sold by Schumacher[®] Electric Corporation may result in a risk of fire, electric shock or injury to persons or damage to property.
- **1.6** To reduce the risk of damage to the electric plug or cord, pull by the plug rather than the cord when disconnecting the charger.
- **1.7** An extension cord should not be used unless absolutely necessary. Use of an improper extension cord could result in a risk of fire and electric shock. If an extension cord must be used, make sure:
 - That the pins on the plug of the extension cord are the same number, size and shape as those of the plug on the charger.
 - That the extension cord is properly wired and in good electrical condition.
 - That the wire size is large enough for the AC ampere rating of the charger as specified in section 8.
- **1.8** To reduce the risk of electric shock, unplug the charger from the outlet before attempting any maintenance or cleaning. Simply turning off the controls will not reduce this risk.
- **1.9** Do not operate the charger with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly gualified persons in order to avoid a hazard.
- **1.10** Do not operate the charger if it has received a sharp blow, been dropped or otherwise damaged in any way; take it to a gualified service person.
- **1.11** Do not disassemble the charger; take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.



AWARNING RISK OF EXPLOSIVE GASES.

1.12 WORKING IN THE VICINITY OF A LEAD-ACID BATTERY IS DANGEROUS. BATTERIES GENERATE EXPLOSIVE GASES DURING NORMAL BATTERY OPERATION. FOR THIS REASON, IT IS OF UTMOST IMPORTANCE THAT YOU FOLLOW THE INSTRUCTIONS EACH TIME YOU USE THE CHARGER.

- 1.13 To reduce the risk of a battery explosion, follow these instructions and those published by the battery manufacturer and the manufacturer of any equipment you intend to use in the vicinity of the battery. Review the cautionary markings on these products and on the engine.
- 1.14 This charger employs parts, such as switches and circuit breakers, that tend to produce arcs and sparks. If used in a garage, locate this charger 18 inches (46 cm) or more above floor level

AWARNING Do not use which rechargeable batteries. Do not use with non-rechargeable batteries. Use only with lead-acid type

IMPORTANT

Do not start the vehicle with the charger connected to the AC outlet, or it may damage the charger and your vehicle.

2. PERSONAL PRECAUTIONS

AWARNING RISK OF EXPLOSIVE GASES.



2.1 NEVER smoke or allow a spark or flame in the vicinity of a battery or engine.
2.2 Remove personal metal items such as rings, bracelets, necklaces and watches when working with a lead-acid battery. A lead-acid battery can produce a short-circuit current high enough to weld a ring or the like to metal, causing a severe burn.

- **2.3** Be extra cautious, to reduce the risk of dropping a metal tool onto the battery. It might spark or short-circuit the battery or other electrical part that may cause an explosion.
- 2.4 Use this charger for charging only LEAD-ACID batteries with 3 cells (6V) or 6 cells (12V) and rated capacities of 12Ah (6V) and 12-35Ah (12V). It is not intended to supply power to a low voltage electrical system other than in a starter-motor application. Do not use this battery charger for charging dry-cell batteries that are commonly used with home appliances. These batteries may burst and cause injury to persons and damage to property.
- **2.5** NEVER charge a frozen battery.
- 2.6 Consider having someone nearby to come to your aid when you work near a lead-acid battery.
- **2.7** Have plenty of fresh water and soap nearby, in case battery acid contacts your skin, clothing or eyes.
- **2.8** Wear complete eye and body protection, including safety goggles and protective clothing. Avoid touching your eyes while working near the battery.
- **2.9** If battery acid contacts your skin or clothing, immediately wash the area with soap and water. If acid enters your eye, immediately flood the eye with cold running water for at least 10 minutes and get medical attention right away.
- **2.10** If battery acid is accidentally swallowed, drink milk, the whites of eggs or water. DO NOT induce vomiting. Seek medical attention immediately.

3. PREPARING TO CHARGE



AWARNING WARNING RISK OF CONTACT WITH BATTERY ACID. BATTERY ACID IS A HIGHLY CORROSIVE SULFURIC ACID.

3.1 If it is necessary to remove the battery from the vehicle to charge it, always remove the grounded terminal first. Make sure all of the accessories in the vehicle are off, to prevent arcing.

- **3.2** Be sure the area around the battery is well ventilated while the battery is being charged.
- **3.3** Clean the battery terminals before charging the battery. During cleaning, keep airborne corrosion from coming into contact with your eyes, nose and mouth. Use baking soda and water to neutralize the battery acid and help eliminate airborne corrosion. Do not touch your eyes, nose or mouth.
- **3.4** Add distilled water to each cell until the battery acid reaches the level specified by the battery manufacturer. Do not overfill. For a battery without removable cell caps, such as valve regulated lead acid batteries (VRLA), carefully follow the manufacturer's recharging instructions.
- **3.5** Read, understand and follow all instructions for the charger, battery, vehicle and any equipment used near the battery and charger. Study all of the battery manufacturer's specific precautions while charging and recommended rates of charge.
- **3.6** Determine the voltage of the battery by referring to the vehicle owner's manual and make sure that the output voltage selector switch is set to the correct voltage. If the charger has an adjustable charge rate, charge the battery in the lowest rate first.
- **3.7** Make sure that the charger cable clips make tight connections.

CHARGER LOCATION





AWARNING AWARNING AWARNING RISK OF EXPLOSION AND CONTACT WITH BATTERY ACID.

4.1 Locate the charger as far away from the battery as the DC cables permit.

4.2 Never place the charger directly above the battery

being charged; gases from the battery will corrode and damage the charger.

- **4.3** Do not set the battery on top of the charger.
- **4.4** Never allow battery acid to drip onto the charger when reading the electrolyte specific gravity or filling the battery.
- 4.5 Do not operate the charger in a closed-in area or restrict the ventilation in any way.

5. **DC CONNECTION PRECAUTIONS**

- 5.1 Connect and disconnect the DC output connectors only after removing the AC plug from the electrical outlet. Never allow the connectors to touch each other.
- **5.2** Attach the connectors to the battery and chassis, as indicated in sections 6 and 7.

FOLLOW THESE STEPS WHEN BATTERY IS INSTALLED IN THE VEHICLE. 6.





AWARNING AWARNING AWARNING A SPARK NEAR THE BATTERY MAY CAUSE A BATTERY EXPLOSION. TO REDUCE THE RISK OF A SPARK NEAR THE BATTERY:

> Do not start the vehicle with the charger IMPORTANT connected to the AC outlet, or it may damage the charger and your vehicle.

- 6.1 Position the AC and DC cables to reduce the risk of damage by the hood, door and moving or hot engine parts. NOTE: If it is necessary to close the hood during the charging process, ensure that the hood does not touch the metal part of the battery connectors or cut the insulation of the cables.
- 6.2 Stay clear of fan blades, belts, pulleys and other parts that can cause injury.
- 6.3 Check the polarity of the battery posts. The POSITIVE (POS, P, +) battery post usually has a larger diameter than the NEGATIVE (NEG, N, -) post.
- 6.4 Determine which post of the battery is grounded (connected) to the chassis. The battery terminal not connected to the chassis has to be connected first. The other connection is to be made to the chassis, remote from the battery and fuel line. The battery charger is then to be connected to the supply mains. See steps 6.5 and 6.6.
- 6.5 For a negative-grounded vehicle, connect the POSITIVE (RED) connector from the battery charger to the POSITIVE (POS, P, +) ungrounded post of the battery. Connect the NEGATIVE (BLACK) connector to the vehicle chassis or engine block away from the battery. Do not connect the connector to the carburetor, fuel lines or sheet-metal body parts. Connect to a heavy gauge metal part of the frame or engine block.
- 6.6 For a positive-grounded vehicle, connect the NEGATIVE (BLACK) connector from the battery charger to the NEGATIVE (NEG, N, -) ungrounded post of the battery. Connect the POSITIVE (RED) connector to the vehicle chassis or engine block away from the battery. Do not connect the connector to the carburetor, fuel lines or sheet-metal body parts. Connect to a heavy gauge metal part of the frame or engine block.
- **6.7** Connect charger AC supply cord to electrical outlet.
- 6.8 After charging, disconnect the battery charger from the supply mains. Then remove the chassis connection and then the battery connection.
- 6.9 See Calculating Charge Time for length of charge information.

FOLLOW THESE STEPS WHEN BATTERY IS OUTSIDE OF THE VEHICLE.



AWARNING AWARNING AWARNING A SPARK NEAR THE BATTERY MAY CAUSE A BATTERY EXPLOSION. TO REDUCE THE RISK OF A SPARK NEAR THE BATTERY:

7.1 Check the polarity of the battery posts. The

POSITIVE (POS, P, +) battery post usually has a larger

diameter than the NEGATIVE (NEG, N, -) post.

- 7.2 Attach at least a 24-inch (61 cm) long 7 AWG (10 mm²) insulated battery cable to the NEGATIVE (NEG, N, -) battery post.
- 7.3 Connect the POSITIVE (RED) charger connector to the POSITIVE (POS, P. +) post of the batterv.
- 7.4 Position yourself and the free end of the cable you previously attached to the NEGATIVE (NEG, N, -) battery post as far away from the battery as possible - then connect the NEGATIVE (BLACK) charger connector to the free end of the cable.
- 7.5 Do not face the battery when making the final connection.
- 7.6 Connect charger AC supply cord to electrical outlet.
- 7.7 When disconnecting the charger, always do so in the reverse order of the connecting procedure and break the first connection while as far away from the battery as practical.
- 7.8 A marine (boat) battery must be removed and charged on shore. To charge it onboard requires equipment specially designed for marine use.

8. AC POWER CORD CONNECTIONS

AWARNING AWARNING RISK OF ELECTRIC SHOCK OR FIRE.



8.1 This battery charger is for use on a nominal 230V. 50 Hz circuit. The plug must be plugged into an outlet that is properly installed in accordance with all local codes and ordinances. The plug pins must fit the receptacle (outlet).

- ADANGER Never alter the AC cord or plug provided if it does not fit the outlet, have a 8.2 proper outlet installed by a qualified electrician. An improper connection can result in a risk of an electric shock or electrocution.
- **8.3** Recommended minimum AWG size for extension cord:
 - 100 feet (30.5 meters) long or less use an 18 gauge (1.0 mm²) extension cord.
 - Over 100 feet (30.5 meters) long use a 16 gauge (1.25 mm²) extension cord.

FEATURES 9.



- 1. AC Power cord
- 2. LED indicators
- 3. Hook attachment
- 4. Battery clamp guick-connect
- 5. Ring terminal quick-connect

10. ASSEMBLY INSTRUCTIONS

10.1 Remove all cord wraps and uncoil the cables prior to using the battery charger.

11. CONTROL PANEL

CLAMPS REVERSED (red) LED flashing: The connections are reversed.

CHARGING (yellow/orange) LED lit: The charger is charging the battery.

CHARGING (yellow/orange) LED flashing: The charger is in abort mode.

CHARGED (green) LED pulsing: The battery is fully charged and the charger is in maintain mode.

NOTE: See Operating Instructions for a complete description of the charger modes.

12. OPERATING INSTRUCTIONS

AWARNING This battery charger must be properly assembled

in accordance with the assembly instructions before it is used.

The charger does not have an ON/OFF switch. The On and Off commands are controlled by plugging the SPI2 into an AC electrical wall outlet only after the battery connections have been made.

IMPORTANT Do not start the vehicle with the charger connected to the AC outlet, or it may damage the charger and your vehicle.

BATTERY INFORMATION

This charger can be used with 3 cell (6V) and 6 cell (12V) lead-acid batteries with rated capacities of 12Ah (6V) and 12-35Ah (12V).

NOTE: This charger is equipped with an auto-start feature. Current will not be supplied to the battery clamps until a battery is properly connected. The clamps will not spark if touched together.

See instructions for charging a battery inside a vehicle (Section 6) or outside of the vehicle (Section 7).

USING THE QUICK-CONNECT CABLE CONNECTORS

Connect any of the output cable assemblies to the charger in a matter of seconds. Make sure to place the charger on a dry, non-flammable surface.

IMPORTANT Never connect the clip and ring terminal connectors together for use in other applications, such as external battery or other power source charging, or to extend the output cable length, as reverse polarity and/or overcharge conditions will occur.

BATTERY CLAMP QUICK-CONNECT

- 1. Connect the end of the charger output cable to the end of the battery clamp quick-connect.
- 2. Follow the steps in sections 6 and 7 to connect the clamps to the battery.
- **3.** After a good electrical connection is made to the battery, plug the power cord into an AC electrical wall outlet. Make sure to place the charger on a dry, non-flammable surface.
- 4. When charging is complete, disconnect the AC cord from the supply mains, remove the negative clamp, and finally the positive clamp.

RING TERMINAL QUICK-CONNECT

The ring connectors permanently attach to the battery, providing easy access to quickly charge your battery. This application is appropriate for motorcycles, lawn tractors, ATVs and snowmobiles.

- 1. To permanently attach to a battery, loosen and remove each nut from the bolts at the battery terminals.
- 2. Connect the red positive connector ring to the positive (POS, P, +) battery terminal.
- 3. Connect the negative connector ring to the negative (NEG, N, -) battery terminal.
- 4. Replace and tighten the nuts to secure them.

- 5. Connect the ring connector cable assembly to the charger. Take care to keep both wires and plug away from hot and moving parts.
- 6. Plug the charger power cord into an AC electrical wall outlet. Make sure to place the charger on a dry, non-flammable surface.
- 7. When charging is complete, disconnect the AC cord from the supply mains, remove the negative connector, and finally the positive connector.

BATTERY CONNECTION INDICATOR

If the charger does not detect a properly connected battery, charging will not start and the

red We LED will flash. Unplug the charger from the AC outlet, reverse the connections at the battery, and then plug the charger back in.

AUTOMATIC CHARGING MODE

When an Automatic Charge is performed, the charger switches to the Maintain Mode automatically after the battery is charged. For a battery with a starting voltage under 1 volt, use a manual charger to pre-charge the battery for five minutes, to get additional voltage into the battery.

ABORTED CHARGE

If charging cannot be completed normally, charging will abort. When charging aborts, the charger's output is shut off, the yellow/orange CHARGING Led LED will flash. To reset after an aborted charge, unplug the charger from the AC outlet, wait a few moments and plug it back in.

COMPLETION OF CHARGE

Charge completion is indicated by the green CHARGED 🗮 LED. When pulsing, the charger has switched to the Maintain Mode of operation.

MAINTAIN MODE (FLOAT-MODE MONITORING)

When the green CHARGED 🗎 LED is pulsing, the charger has started Maintain Mode. In this mode, the charger keeps the battery fully charged by delivering a small current when necessary. **NOTE:** If the charger has to provide its maximum maintain current for a continuous 12 hour period, it will go into Abort Mode (see Aborted Charge section). This is usually caused by a drain on the battery, or the battery could be bad. Make sure there are no loads on the battery. If there are, remove them. If there are none, have the battery checked or replaced.

MAINTAINING A BATTERY

The SPI2 maintains 6 and 12 volt batteries, keeping them at full charge.

NOTE: The maintain mode technology allows you to safely charge and maintain a healthy battery for extended periods of time. However, problems with the battery, electrical problems in the vehicle, improper connections or other unanticipated conditions could cause excessive current draws. As such, occasionally monitoring your battery and the charging process is recommended.

13. CALCULATING CHARGE TIME

BATTERY PERCENT AND CHARGE TIME

This charger adjusts the charging time in order to charge the battery completely, efficiently and safely. The microprocessor automatically performs the necessary functions. This section includes guidelines that can be used to estimate charging times. Use the following table to determine the time it will take to bring a battery to full charge. First, identify where your battery fits into the chart.

CCA = Cold Cranking Amps Ah = Amp Hour

Find your battery's rating on the following chart, and note the charge time given for each charger setting. The times given are for batteries with a 50% charge prior to recharging. Add more time for severely discharged batteries.

В	ATTERY SIZE/RATING	i	CHARGE RATE/ CHARGING TIME 2 AMP
SMALL	Motorcycle,	6-12 Ah	2-3¾ hrs
BATTERIES	garden tractor, etc.	12-32 Ah	3¾-10 hrs
CARS/TRUCKS	200-315 CCA	36-46 Ah	11¼-14½ hrs
	315-550 CCA	46-58 Ah	MAINTAIN ONLY
	550-1000 CCA	58-111 Ah	MAINTAIN ONLY
MARINE/DEEP-CYCLE		56 Ah	MAINTAIN ONLY
		86 Ah	MAINTAIN ONLY
		96 Ah	MAINTAIN ONLY
		106 Ah	MAINTAIN ONLY

14. MAINTENANCE INSTRUCTIONS

- 14.1 Cleaning and user maintenance should not be done by children without supervision.
- **14.2** After use and before performing maintenance, unplug and disconnect the battery charger (see sections 6, 7 and 8).
- **14.3** Use a dry cloth to wipe all battery corrosion and other dirt or oil from the battery connectors, cords, and the charger case.
- **14.4** Ensure that all of the charger components are in place and in good working condition, for example, the plastic boots on the battery clips.
- **14.5** Servicing does not require opening the unit, as there are no user-serviceable parts.
- 14.6 All other servicing should be performed by qualified service personnel.
- **14.7** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid a hazard.

15. MOVING AND STORAGE INSTRUCTIONS

- **15.1** Store the charger unplugged, in an upright position. The cord will still conduct electricity until it is unplugged from the outlet.
- **15.2** Store inside, in a cool, dry place.
- **15.3** Do not store the connectors clipped together, on or around metal, or clipped to cables.
- **15.4** If the charger is moved around the shop or transported to another location, take care to avoid/prevent damage to the cords, connectors and charger. Failure to do so could result in personal injury or property damage.

16. TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	REASON/SOLUTION
Battery connectors do not spark when touched together.	The charger is equipped with an auto-start feature. It will not supply current to the battery connectors until a battery is properly connected. The connectors will not spark if touched together.	No problem; this is a normal condition.
The charger will not turn on when properly connected.	AC outlet is dead.	Check for open fuse or circuit breaker supplying AC outlet.
	Poor electrical connection.	Check power cord and extension cord for loose fitting plug.

PROBLEM	POSSIBLE CAUSE	REASON/SOLUTION
I cannot select a 6V or 12V setting.	The charger is equipped with Auto Voltage Detection, which automatically detects the voltage and charges the battery.	No problem; this is normal.
The yellow/orange ☑ LED is flashing.	The battery is sulfated.	Reset the charger by briefly unplugging it.
	The battery is too large for the charger.	You need a charger with a higher amp rate.
The red 🖗 LED is flashing.	The clamps are not making a good connection.	Check for poor connection at battery and frame.
	The fuse is bad.	Replace the in-line fuse for the ring connector.

17. SPECIFICATIONS

Input Output	
Dimensions – H x W x D	
Weight	0.65 kg
Output protection	Yes
Reverse polarity protection, spark/arc-proof	Yes
Ingress Protection rating	IP54

18. REPLACEMENT PARTS

Battery clamps (quick-connect)	3899002636Z
Ring connectors (quick-connect)	2299002042Z

19. LIMITED WARRANTY

WARRANTY TERMS AND CONDITIONS

Schumacher Electric Corporation (the "Manufacturer") or the resellers authorized by the Manufacturer (the "Reseller") warrant this Charger (the "Product") for two (2) years, according to the following stipulations. Any and all warranties, other than the warranty included herein, are hereby expressly disclaimed and excluded to the fullest extent permissible under applicable law. Legislation may imply warranties or conditions or impose obligations on Manufacturer which cannot be excluded, restricted or modified in relation to consumer goods.

Consumer End-User Warranty

Any claims under this warranty must be communicated to Reseller within 2 months after discovery of the non-conformity.

Resellers/Professional End-User Warranty

The Manufacturer provides a limited warranty for hidden defects or non-conformities. This warranty is subject to the following conditions:

- a. The Manufacturer only warrants hidden defects in material or workmanship present in their root cause at the moment of the first sale by the Manufacturer;
- **b.** Manufacturer's obligation under this warranty is limited to repairing or replacing the Product with a new or reconditioned unit at the sole option of the Manufacturer;

- c. Manufacturer does not have any warranty obligations if the alleged defects were caused by abnormal usage, fair wear and tear, unauthorized use of the Product or use of the Product differing from the description in the applicable manual or other specifications given by the Manufacturer, insufficient care, repairs carried out by persons or entities or with parts not approved by Manufacturer, poor care, accidents, unauthorized changes or modifications, incorrect transport, storage or treatment of the Product;
- d. In order to exercise this right, the Product must be returned complete and in its original state and packaging, with mail costs prepaid, along with proof of purchase to the Manufacturer or its authorized representatives in order for repair or replacement to occur.

Common Warranty Provisions

The warranty mentioned above only applies to the first professional or consumer user having legally acquired the Product from the Manufacturer or a Reseller. No warranty is extended towards clients, agents or representatives of those buyers.

The Product is sold under the specifications, for the use and purpose in accordance with the provisions of this manual, with express exclusion and disclaimer of warranty of any other specifications, uses and purposes.

Authorized Resellers are prohibited from making any statements or providing any warranty in excess of the above warranties Non-authorized resellers may only sell the product under the condition that they assume all warranty obligations with the total exclusion of any warranty provided by the Manufacturer.

Manufacturer does not provide any warranty for any accessories used with the Product that are not manufactured by Schumacher Electric Corporation.

This warranty does not exclude or diminish any claims the Manufacturer may have against the distributors of The Product.

THE MANUFACTURER NEITHER ASSUMES NOR AUTHORIZES ANYONE TO ASSUME OR MAKE ANY OTHER OBLIGATION TOWARDS THE PRODUCT OTHER THAN THIS WARRANTY.

Warranty, Repair Service and Distribution Centers:

For customers outside of the U.S.A., contact your local distributor.

North and South America: Hoopeston in U.S.A. 1-800-621-5485 services@schumacherelectric.com

Europe: Office in Belgium Rue de la Baronnerie 3, B-4920 Harzé-Belgium +32 4 388 20 17 info@ceteor.com

Australia/New Zealand: Schumacher Asia Pacific Pty. Ltd. A.B.N. 43613943525 Unit 53B – 28 Burnside Road, Ormeau Queensland, Australia, 4208 07 3807 6510

Schumacher[®] and the Schumacher logo are registered trademarks of Schumacher Electric Corporation.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



We

Schumacher Electric Corporation 801 East Business Center Drive Mount Prospect, Illinois, 60056, U.S.A.

certify that the Automatic Battery Charger Model SPI2 complies with the following standards:

Low Voltage Directive (LVD): 2006/95/EC (until 04/19/2016) 2014/35/EU (from 04/20/2016) FMC Directive: 2004/108/EC (until 04/19/2016) 2014/30/EU (from 04/20/2016) EN 60335-1:2012 + A11:2014

EN 60335-2-29:2004 + A2:2010 EN 62233:2008

and therefore conforms with the protection requirements relating to safety and electromagnetic compatibility.

The year in which the CE marking was affixed is "2014".

Manufacturer:

Cory A War

Cory Watkins, President July 1, 2014

Hereby declares that the equipment Model SPI2 is compliant to the DIRECTIVE 2011/65/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 8 June 2011 (RoHS) on the restriction of the use of certain hazardous substances in electrical and electronic equipment while:

The parts do not exceed the maximum concentrations of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls (PBB) and polybrominated diphenyl ethers (PBDE), and 0.01% for cadmium, as required in Commission Decision 2005/618/EC of 18 August 2005.

July 1, 2014

Cory A Was

President, Schumacher Electric Corporation - U.S.A.



Certificate of Approval

Certificate No.:

SAA-142189-EA

Certificate Holder:

Schumacher Electric Corporation 801 East Business Center Drive, Mount Prospect, 60056, IL, U.S.A.

Class Description: Product Description: Brand Name: Model No.: Markings:

Standard:

Conditions:

Approval Mark:

Date First Registered: Date of Expiry: Power Supply or Charger Battery Charger Schumacher SPI2 Input: 230Vac 50Hz 0.5A Output: 6/12Vdc 2.0A Class II AS/NZS 60335.2.29:2004 Inc A1-2 AS/NZS 60335.1:2011 Inc A1 Nil

SAA-142189-EA or RCM

18 November 2014 18 November 2019

For and on Behalf of SAA Approvals Pty Ltd

SAA Approvals Pty Ltd Electrical Product Safety Certification Scheme as accredited by JAS-AN2 under ISO/IEC Guide 65 certifies that the electrical product described on this certificate complies with the minimum electrical safety requirements for which the application has been made.

For SAA Contact Details and to verify this Certificate go to: www.saaapprovals.com.au



www.jas-anz.org/register

