POWERTECH

2000W 12VDC to 240VAC Pure Sine Wave Inverter



MI5740 User Manual

IMPORTANT





 
Please read and understand this manual before installing and using this inverter.

DANGER! High voltages inside; do not open the inverter case while power is connected.

Do not connect to equipment that exceeds the inverter's specified power rating.

Permanent damage may occur that will not be covered by the warranty.

Types of Inverter.



There are 2 types of inverters available for use in consumer applications. These are:

Pure Sine Wave Inverters:

The name "pure sine wave" inverter comes from the wave form of its output, as shown in the above diagram. This is identical to or replicates as closely as possible the normal AC mains. As most electronic products are designed to be powered by sine wave AC, pure sine wave inverters are suitable for all applications, especially motorized devices where it is proven that pure sine wave power will lengthen the product's lifetime and run much quieter. Pure sine wave inverters are more expensive than modified sine wave inverters because they involve a much more complicated design in order to simulate the smooth sine wave output of standard mains power.

Modified Sine Wave Inverters:

Again, modified sine wave are named after their output waveform. The output of the modified sine wave inverter cycles through positive, ground and negative voltage as shown in the diagram above, to give a rough approximation of a sine

Modified sine wave inverters are a cheaper alternative to pure sine wave inverters as they don't require the complicated system needed to smooth and render the output waveform. The main down side with a modified sine wave is that it can introduce electrical noise (buzzing) to inductive and A-V equipment. This is caused by the fast reversal of the output voltage 100 times per second. However, modified sine wave inverters are OK for heat element devices (kettle, heaters, etc) and devices that have an external or built-in adaptor (laptop, TV, etc).

How do I choose between Modified Sine Wave or Pure Sine Wave Inverters?

- 1. Inductive loads such as microwave ovens run faster, quieter, cooler and more efficiently on pure sine wave.
- 2. Pure sine wave reduces audible and electrical noise (buzzing) in fans, fluorescent lights, audio amplifiers, TVs etc
- 3. Pure sine wave prevents crashes in computers, glitches and noise in monitors
- 4. Pure sine wave reliably powers the following devices that normally won't work with modified sine wave inverters:
- Laser printers, photocopiers, magneto-optical hard drives. Some fluorescent lights with old-type ballasts.
- Power tools using variable speed controllers AC motors.
- Sewing machines with speed/microprocessor control.
- Battery chargers



General Safety Precautions and Installation Tips:

- Place the inverter on a reasonably flat surface, either horizontally or vertically.
- The inverter should not be installed in the enginer compartment, due to possible water/oil/acid contamination, and excessive heat under the bonnet, as well as potential danger from petrol fumes and the spark that an inverter can occassionally produce. It's best to run battery cables to a dry, cool mounting location.
- Keep the inverter dry. Do not expose it to rain or moisture. DO NOT operate the inverter if the inverter, the device being operated, or any other surfaces that may come in contact with any power source are wet. Water and many other liquids can conduct electricity which may lead to serious injury or death.
- Do not operate the inverter in dusty environments. Keep the fan clean and free of dust.
- · Avoid placing the inverter on or near heating vents, radiators or other sources of heat. Do not place the inverter in direct sunlight. Ideal operating temperature is between 10°C and 30°C. Allow at least 2 inches (5cm) of air space on all sides of the inverter. During operation, keep away from materials that may be affected by high temperatures.
- In order to properly disperse heat generated while the inverter is in operation, keep it well ventilated. While in use, maintain several inches of clearance around the top and sides of the inverter.
- DO NOT use the inverter near flammable materials
- DO NOT install inverters in unvented battery compartments
- DO NOT expose the inverter to temperatures exceeding 40°C
- \bullet DO NOT connect live AC power to the inverter's AC outlets. The inverter will be damaged even if it is switched OFF.

CAUTION: Any internal adjustment on the inverter is prohibited. Do not disassemble.



Using the Remote Control:

IMPORTANT:

The power switch on the Inverter must be set to "Off" (no lights showing) before the remote switch can operate.

- Make sure the inverter's on-board switch is set to "Off" (No lights showing)
- Plug the white remote cable into the "Telephone" type socket on the front panel of the inverter.
- Press and hold the button on the remote unit for about 1 second.
- The green light on the remote unit should come on, and the inverter should switch on.
- To turn the inverter off, press and hold the remote button until the green light goes out.

 
NOTE: if you switch the inverter on using the remote control, and then after that also set the inverter's onboard switch to "ON," the green light on the remote unit will stay on. If you press the remote's on-off button, the green light will go out, but the inverter will stay on. After that, pressing the remote button has no further effect.

2000 Watt Pure Sine Wave Inverter MI5740

Packing Details:

- 1 x Power Inverter 1 x Pair of Battery Cables
- 1 x User Manual 1 x Remote Control Kit









- Low Battery Alarm Short Circuit Protection 1/21 Low Voltage Protection
- Overload Protection Over Voltage Protection Over Temperature Protection

Specifications

AC Output	Continuous power	2000W
	Surge power	4000W
	Max Constant Power Start	2400W for 10 seconds
	Output Wave form	Pure Sine Wave(THD<3%)
	Output Frdquency	50Hz±3Hz
	Voltage	240VAC
DC Input	DC Input Voltage	12VDC
	Voltage Range	10V-15V
	Low Voltage Alarm	10.5V±0.5V
	Low Voltage Shut down	10V±0.5V
	Over Voltage Shut down	15V±0.5V
Protection	Over Thermal	Shut Off Output Automatically,Temperature>75°C
	Short circuit protection	Reverse Polarity(ExternalFuse)
	Cooling Fan automatically run	Temperature≥45°C
Environment	Working temperature	-10°C~+50°C
	Working humidity	20%-90%RHNon-Condensing
	storage Temperature Range	-30°C~+70°C
	Converting Max Efficiency	90%(FullLoading)/95%(1/3Loading)
	No Load Consumption	<1.2A
	LED Indicator Light	Inverter, Fault
Packing	Product size	320*220*92mm
	Inner Box Dimensions(mm)	446*285*162mm
	Net product weight(kg)	4.65KG
	Inner Box Weight(kg)	5.46KG

